

Digimon Microphone

OWNER'S MANUAL — Please read before using this equipment.


With the RadioShack Digimon Microphone, you can listen to pre-recorded phrases by some of your favorite Digimon! Or you can hear your own voice through the microphone's amplifier.

OPERATION

1. Slide **ON/OFF** at the bottom of the microphone to **ON**.
2. Press and hold the bottom button to hear your favorite Digimon voice.
3. To hear your own voice through the microphone, hold down the top button. Then speak directly into the microphone.
4. Slide **ON/OFF** to **OFF** when you finish playing with the microphone.

REPLACING THE BATTERY

Your Digimon Microphone comes with one 9V battery. For the best operation and longest life, we recommend a RadioShack alkaline battery. If the microphone sounds weak, replace the battery.

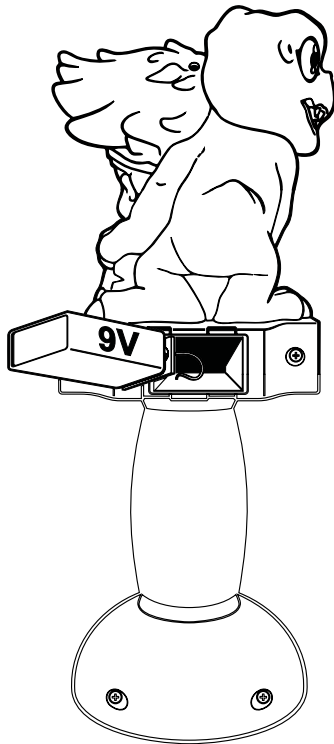

Cautions:

- Use only a fresh battery of the required size and recommended type.
 - If you do not plan to use the microphone for several days, remove the battery.
 - Never leave a dead or weak battery in the microphone.
 - Dispose of the battery properly; do not bury or burn it.
1. Use a screwdriver to loosen the battery compartment cover's screw and remove the cover.
 2. Remove the old battery.
 3. Attach a fresh 9V alkaline battery to the terminals and place the battery in the compartment.
 4. Replace the cover and secure it with the screw.

CARE

To enjoy your Digimon Microphone for a long time:

- Keep the microphone dry. If it gets wet, wipe it dry immediately.
- Use and store the microphone only in normal temperature environments.
- Handle the microphone gently and carefully. Do not drop it.
- Keep the microphone away from dust and dirt.
- Wipe the microphone with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the microphone's internal components can cause a malfunction and might invalidate its warranty. If your microphone is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99